

# Automated Inspection & Intelligent Material Handling for Bagels



www.montrose-tech.com

Montrose inspection and handling systems provide a complete inspection, rejection, and handling solution created just for bagel manufacturing lines. Receive comprehensive statistical analysis of variability while removing human involvement from inspection, rejection, de-kissing, and laning.

A high speed, turnkey system that allows you to:

1. Assure quality on a 100% monitoring basis.
2. Remove individual defective and non-conforming product from the line.
3. Monitor process statistics to pinpoint causes of waste.
4. Equally feed in-spec bagels into each of the packaging lanes.
5. Automatically buffer in the case of bottlenecks.
6. Rapidly recognize a positive ROI by improving quality, reducing waste, and automating production - in previously labor-intensive areas

Solution Components	SnapQC	FocalPoint	MT Series	AutoLaner
3D & True Color Inspection	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
Bottom Color Inspection	<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>	
Automated Rejection			<input checked="" type="checkbox"/>	
De-kissing/Recirculation			<input checked="" type="checkbox"/>	
Laning and Entrance to Packaging				<input checked="" type="checkbox"/>
In-line Accumulation / Buffering			<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Weight	<input checked="" type="checkbox"/>			
Statistical Analysis and Reporting	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
Nema 4X		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Sanitary Design	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>



MT-36 In-line Inspection Systems for Bagels

## Isolate and Eliminate Sources of Waste

Automated inspection provides real-time and historical information on fault, and out-of-spec conditions, allowing you to isolate the issues causing the most waste by shift, product, line, and plant. The measurement results will also make it easier to reach consistent quality when developing new products or when formulation changes are made.

Analysis Type	Example Faults	Impact on Customer or Plant	Rejection Capability	Statistical Analysis
Geometrical Analysis	Too large or small Too tall or short	Product rejection	0-100% fully under plant control	Worst Fault Pareto
	Ovality Doubles	Customer complaints		Reporting
	Poor symmetry/join Hole area	Handling problems (jamming at the slicer/bagger)		Dashboard
Color Analysis (Top and Bottom)	Under/over- baked Visible Debris	Consumer Complaints	0-100% fully under plant control	Worst Fault Pareto
	Too light Too dark	Product rejection		Reporting
	Foreign material Too much/little topping	Topping giveaway		Dashboard

## Measure, Analyze, Reject

The **MT Series inspection system** uses 3-D vision to identify kissed pairs of bagels and special mechanical features to break apart the kissed pairs. Once apart, the bagels are re-circulated through the inspection system to be inspected and graded as individual bagels. Conveyor speeds may be adjusted automatically to buffer in the case of bottlenecks downstream.

# Automated Inspection & Intelligent Material Handling for Bagels

**MONTROSE**  
TECHNOLOGIES INC.


www.montrose-tech.com

## Height Analysis



**Profile height calculations** are based on hundreds of individual height values gathered on every product, which leads to a measurement accuracy of  $\pm 0.5\text{mm}$ . **Mean Height** is another common measurement applied to bagels.


## 2D Analysis

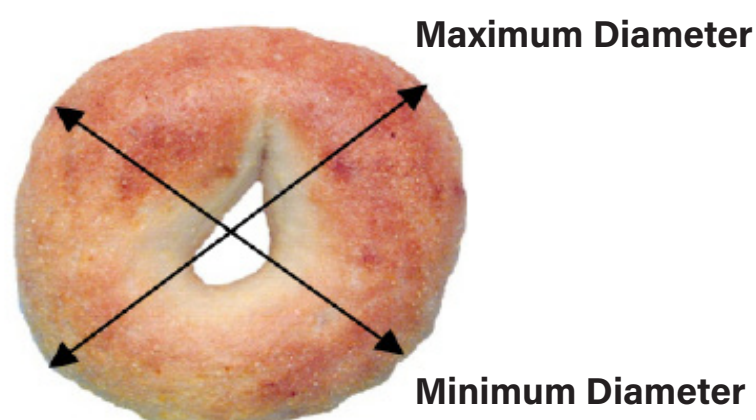

**Two dimensional calculations** are based on an accurately defined perimeter, which is imaged by both overhead cameras.

2-D measurement accuracy is  $\pm 0.5\text{mm}$ . **Mean Diameter, Roundness, Surface Area, and Volume** are other common measurements applied to bagels.

## Color Analysis

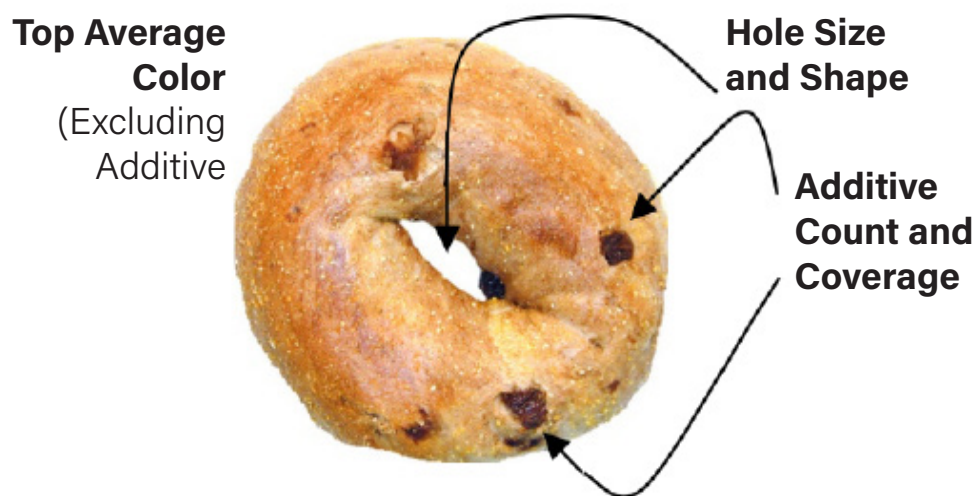

**True color calculations**, on both the top and bottom surface of the product, are measured in various units such as  $L^*a^*b^*$  and BCU.

## Common Fault Analysis



**Too Large**  
(large peak height, and/or volume)



**Misshaped**



**Poor Join**  
(Sloped and/or side notched)



**No Hole**



**Kissed**  
(join length and double surface area, separate and re-circulate)



**Double Triple**  
(large surface area and hole count)

Only common examples have been pictured. There are many standard measurements that can be used, individually or combined within formulae, to qualify your product. **All visible product characteristics and faults can be quantified.**